

# **SNC-RX530/RX550/RX570**

## **Firmware Ver.3.14/2.44**

The supplement manual for function of the Video & PT drive refresh

August 31, 2010

Sony Corporation

# Configuring the System

## — System Menu

When you click in the Administrator menu, the System menu appears.

Use this menu to perform the principal settings of the software.

The System menu has six tabs: **System**, **Date & time**, **Superimpose**, **Initialize**, **System log** and **Access log**.

### Initialize Tab

The screenshot displays the 'Initialize' tab within a system configuration interface. On the left is a vertical sidebar with buttons for 'System', 'Camera', 'Network', '802.1X', 'User', 'Security', 'Preset position', 'e-Mail (SMTP)', 'FTP client', 'Image memory', 'FTP server', 'Alarm output', 'Voice alert', 'Trigger', 'Schedule', 'Alarm buffer', 'Object detection', and 'Serial'. The main area has six tabs: 'System', 'Date & time', 'Superimpose', 'Initialize' (selected), 'System log', and 'Access log'. Below these tabs are several configuration sections:

- Reboot**: A 'Reboot' button.
- Factory default**: A 'Factory default' button.
- Backup setting data**: A 'Save' button.
- Restore setting**: A text input field, a '参照...' button, and an 'OK' button. Below it is a checkbox labeled 'Restore preset position and privacy masking settings'.
- Video & PT drive refresh**:
  - Radio buttons for 'On' (selected) and 'Off'.
  - Manual**: A 'Refresh' button.
  - Schedule**: Includes an 'Interval' field set to '00 H 30 M' with a note '(MIN : 30 min. MAX : 24 hour interval)'. Below it is an 'Effective period' section with radio buttons for 'Always' and 'Schedule' (selected), and a 'Schedule' button.
- Format ATA memory card**: A 'Format' button.
- Delete custom homepage**: A 'Delete' button.

At the bottom of the main area are 'OK' and 'Cancel' buttons.

### Video & PT drive refresh

Select **On** to avoid image distortion due to poor contact of the slip ring, or to initialize the pan/tilt position.

#### Manual

Click **Refresh**, and panning and tilting starts automatically.

## Schedule

### Refresh interval

The refresh interval for the video & PT drive should be set periodically. The interval can be set between 30 minutes and 24 hours (one day).

### Available period of time

Set the time period within which video & PT drive refresh can be performed.

**Always:** video & PT drive refresh is always performed.

**Specify:** video & PT drive refresh can be set to a preferred schedule.

Click **Schedule**. The Menu for period setting can be displayed. (“Setting the Schedule — Schedule Menu”)

**Video & PT drive refresh - Timer schedule**

☐ Use the same time schedule every day.

	Start time	00	:	00	- End time	24	:	00
<input checked="" type="checkbox"/> Mon	Start time	00	:	00	- End time	24	:	00
<input checked="" type="checkbox"/> Tue	Start time	00	:	00	- End time	24	:	00
<input checked="" type="checkbox"/> Wed	Start time	00	:	00	- End time	24	:	00
<input checked="" type="checkbox"/> Thu	Start time	00	:	00	- End time	24	:	00
<input checked="" type="checkbox"/> Fri	Start time	00	:	00	- End time	24	:	00
<input checked="" type="checkbox"/> Sat	Start time	00	:	00	- End time	24	:	00
<input checked="" type="checkbox"/> Sun	Start time	00	:	00	- End time	24	:	00

OK Cancel

### Notes

- Camera operation can be canceled when you run video & PT drive refresh while operating the camera.
- Position tours stops if video & PT drive refresh is running while you are running position tours. After video & PT drive refresh has been completed, the position tour restarts.

- Intelligent motion detection and camera tampering detection or VMF stops immediately if you execute video & PT drive refresh when Intelligent motion detection, camera tampering detection and VMF are set. After video & PT drive refresh is completed, motion detection and camera tampering detection or VMF restarts.

## Setting the Schedule

### — Schedule Menu

When you click **Schedule** in the Administrator menu, the Schedule menu appears.

The Schedule menu consists of nine tabs.

This is the same menu as the Schedule menu that is displayed when you click **Schedule** to set the **Effective period** in the following menus.

**Day/Night: Schedule** in the Day/Night tab of the Camera menu

**Preset position: Schedule** in the Position Tour tab of the Preset position menu

**e-Mail: Schedule** in the Alarm sending or Periodical sending tab of the e-Mail (SMTP) menu

**FTP: Schedule** in the Alarm sending or Periodical sending tab of the FTP client menu

**Image memory: Schedule** in the Alarm recording or Periodical recording tab of the Image memory menu

**Alarm output: Schedule** in the Alarm output 1 or Alarm output 2 tab of the Alarm output menu

**Voice alert: Schedule** in the Voice alert 1, 2 or 3 tab of the Voice alert menu

**Video & PT drive refresh: Schedule** button in video & PT drive refresh of the Initialize tab of the System menu

#### Use the same time schedule every day

When this item is checked, the same **Start time** and **End time** are applied to all days. In that case, the **Start time** and **End time** of the day from **Mon** (Monday) to **Sun** (Sunday) cannot be input.

#### Mon (Monday) to Sun (Sunday)

The time period on the right of the checked day is the effective period of the schedule.

#### Start time, End time

Specify the start time and the end time.

**OK**

Click this button to confirm the settings.

**Cancel**

Click this button to nullify the set values and return to the previous settings.

End of file